

TEMPORARY FIX DESIGN TOOL ECATALOG

After following this guide all your components will be fetched from a local library instead of the official eCatalog. This is a temporary fix until the bug with the eCatalog is fixed and released.

1. Make sure eCatalog is synced

To be able to apply this temporary fix your eCatalog needs to be synced, it should look like below. If your eCatalog doesn't look like below, please see below instructions for cleaning the eCatalog.

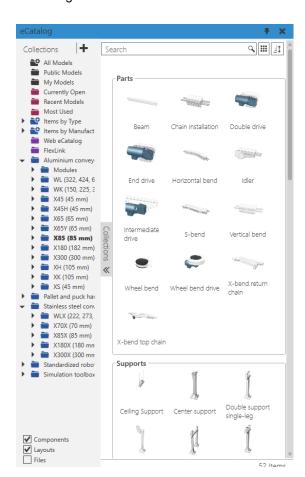


Figure 1: Ecat correct synced with all components visible

Clean ecat (only needed if ecat not synced correct)

- 1. Close FlexLink Design Tool
- 2. Open the Windows Start menu
- 3. Select the FlexLink Design Tool folder




- 4. Select the FlexLink Design Tool Utility
- 5. Click Clean button
- 6. Click Yes button
- 7. Click Close button
- 8. Make sure you are online and connected to Internet
- 9. Restart FlexLink Design Tool


The application will now start to download the eCatalog components. It may take some time depending on Internet connection speed. Do not interrupt the download process.

2. Save local copy of eCatalog

1. Click on the *Plus icon* at the top of the eCatalog.

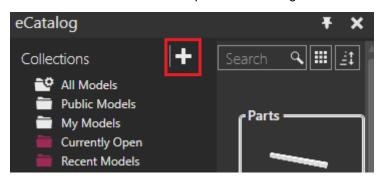


2. Select Edit Sources in the drop-down menu.

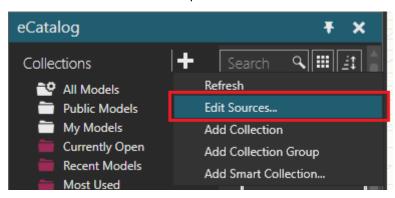





3. The Sources table is displayed.

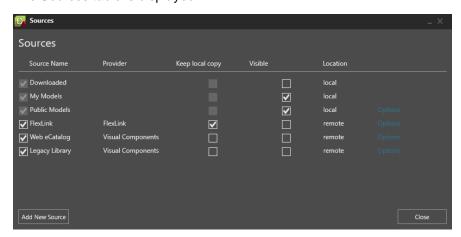

4. Click on Options for the FlexLink eCatalog

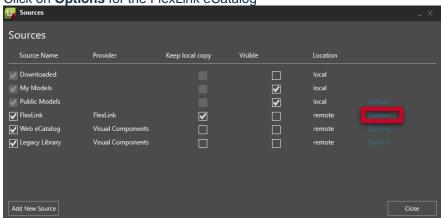


5. Copy address to local copy

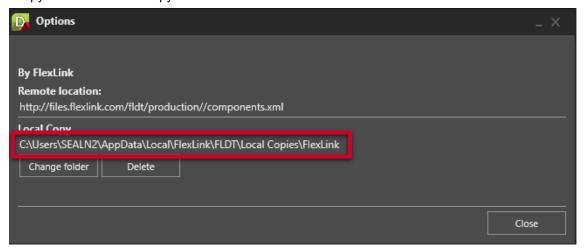




6. Open File Explorer and paste the adress

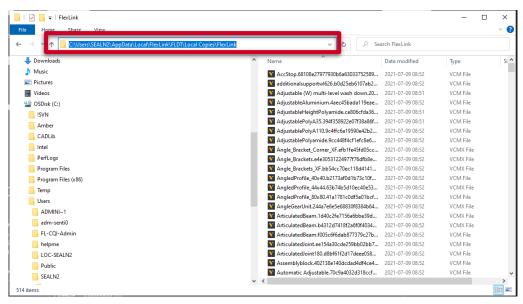

7. Go up one level in the file structure




8. Copy the **FlexLink** folder (CTRL + C)

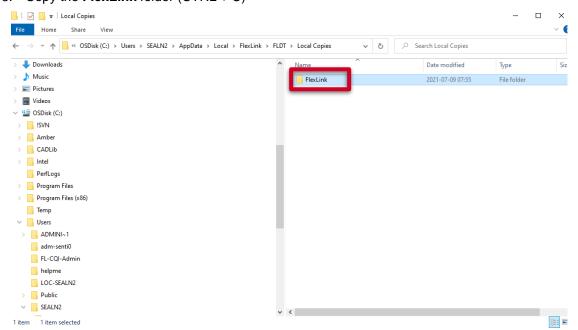




9. Go into the FlexLink folder inside your documents

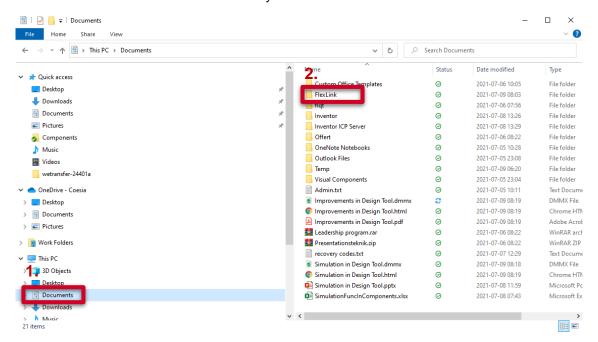


10. Paste the previously copied folder (CTRL + V), This ill take a while

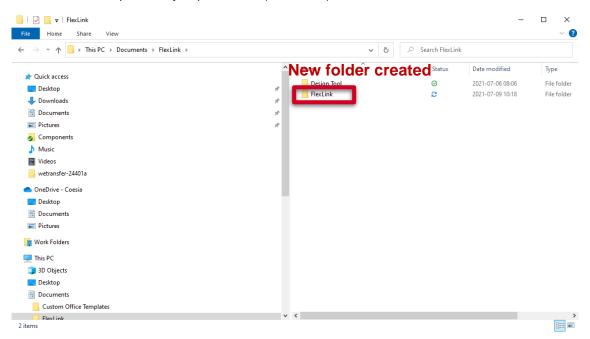




11. In Design Tool click Add New Source

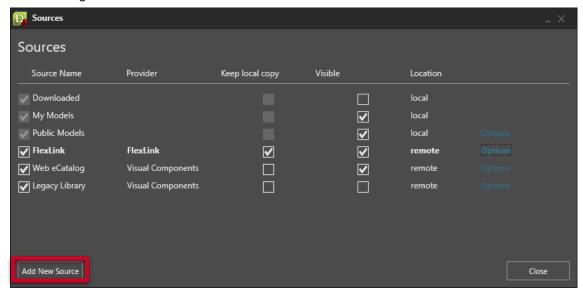


12. Click Select Local Source

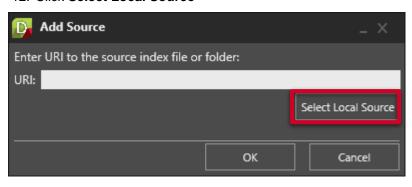




13. Select the folder you just created

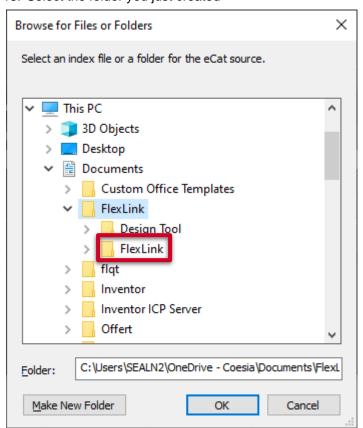


14. Your Sources should now look like this

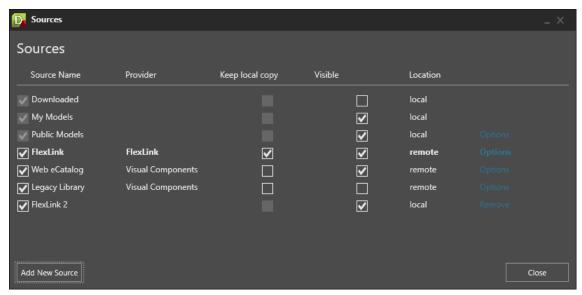



15. Disable the old eCatalog by unchecking the thickbox on that row

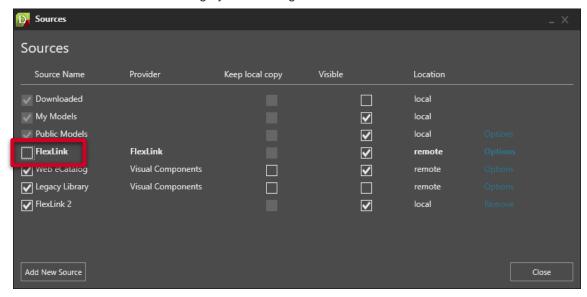

16. Click Close

